


AUXILIARY AMPLIFIER and POWER SUPPLY for EVAC Systems

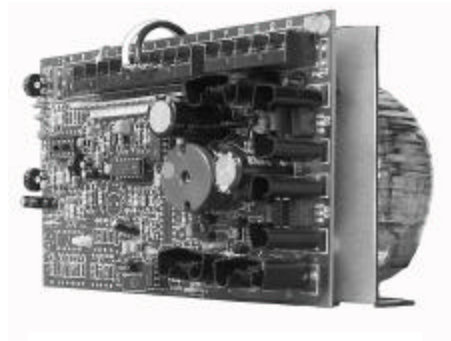


AMP-25-50
Part #: 910510
Size: 3.25" W x 7.25" H x 4" D

AMP-25-50:

Digital Amplifier shown mounted on L-Bracket.
Field selectable for 25 or 70-volt speakers
Overload Protection
Diagnostic LED.
Trouble output.

Application:

Use to add audio power in increments of 50-watts.
Requires PS-AUX power supply.
Header for AMP-SUPV module.
Can be used as a STANDBY amplifier.

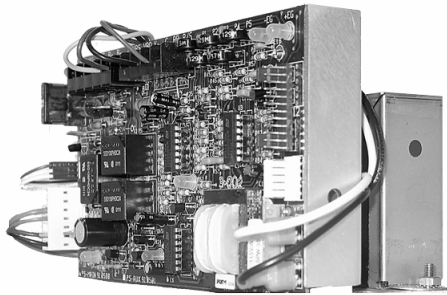

PS-AUX
Part #: 910501
Size: 5' W x 7.25 H x 4' D

PS-AUX:

Auxiliary Power Supply shown mounted on L-Bracket.
24 volt, 3.5 A regulated output.
Overload Protection.
Overvoltage Protection.
Brownout detection.
Trouble Output.
Diagnostic LEDs.
Sleep mode during Brownout.
Automatic transfer to battery during Brown-out or Power Outage
Ground Fault Indication.
Fused, Supervised, battery cable.
Header and cable for connection to main controls.

Application:

Provides power for Auxiliary Amp-25-50.
Provides power for Strobe Supervisory Modules.
Provides Power for auxiliary relays and other modules



PSAMP-101
AMP-25-50 & PS-AUX ASSEMBLY
Part # 910565
Size: 6.75" W x 8" H x 4.25 D

PS/AMP-101:

Combined AMP-25-50 & PS-AUX modules.

This assembly can be connected to the main control system and additional auxiliary units by means of the plug-in harness provided with the assembly.

The assembly includes the Amplifier Supervisory Module (Part # 910515) which is plugged into a header on the Amplifier Module.

Application:

May be used with any EVAC 101, 401, 2101-M, or FireFighter 2101 EP-M control.